


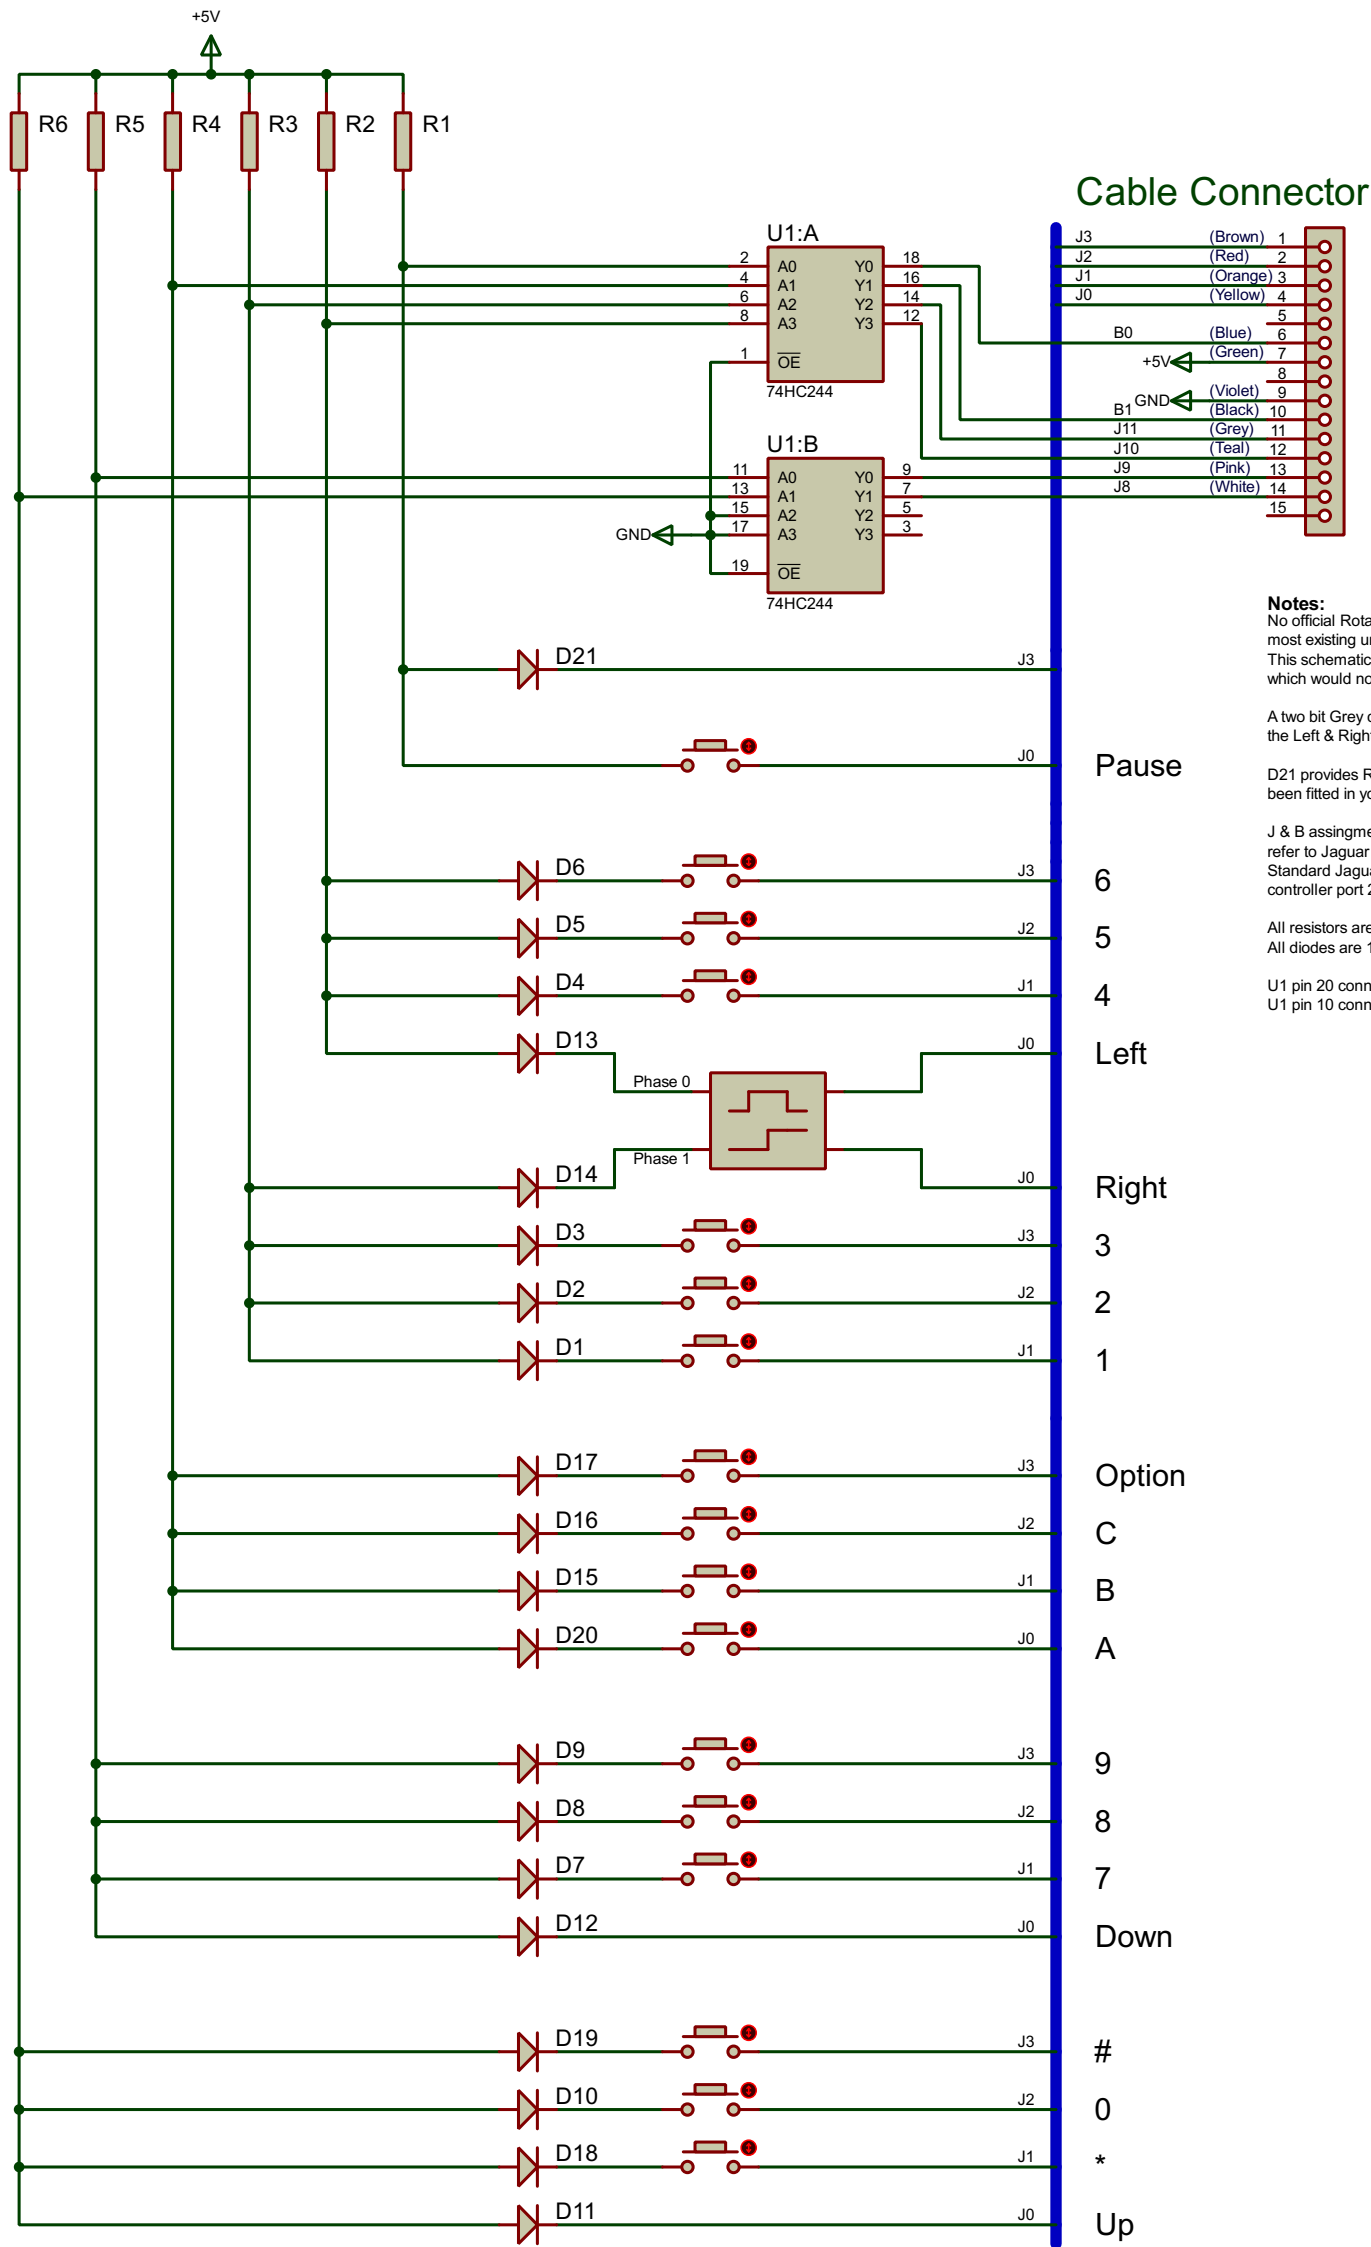

Notes:
No official Rotary controllers were ever produced, consequently most existing units are modified Standard and Pro controllers. This schematic reflects that by including D11 & D12 which would not normal exist in a Rotarty controller.

A two bit Grey code rotary position encoder replaces the Left & Right D-Pad buttons.

D21 provides Rotary controller identification, but may noy have been fitted in your controller, see Tech ref for fitting instructions.

J & B assingments shown for the cable connector refer to Jaguar controller port 1 only, see the Standard Jaguar Controller Martix table for the controller port 2 equivalentents.

All resistors are 4K7
All diodes are 1N4148

U1 pin 20 connected to +5V
U1 pin 10 connected to GND